

EC LIVING
BY ELECTROCOMPANIET


EN | ENGLISH



EC LIVING REMOTE

QUICK START GUIDE

Remote control overview

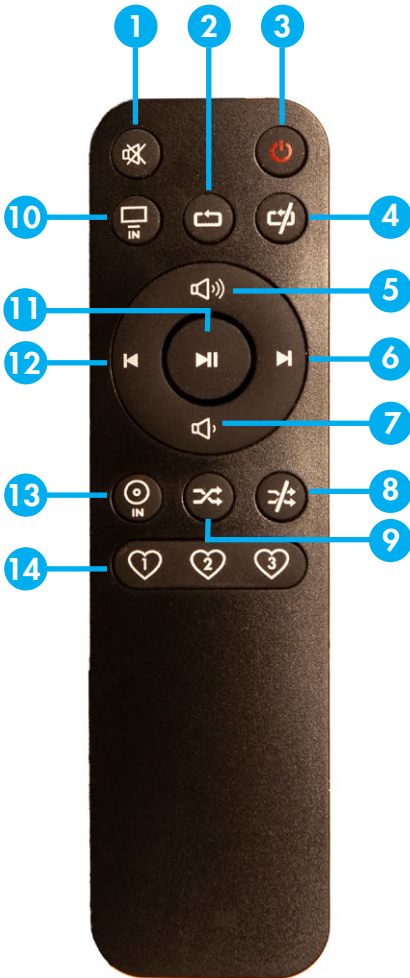

1. Mute
2. Repeat track ON
3. Standby/Power
4. Repeat track OFF
5. Volume UP
6. Next track
7. Volume DOWN
8. Shuffle tracks OFF
9. Shuffle tracks ON
10. Toslink 1 - TV input
11. Play / Pause
12. Previous track
13. Coax input 1 - CD input
14. Favourite buttons

Bluetooth pairing setup

1. Remove the plastic battery protector on the rear side.
2. Start the EC Play App .
3. Go to “... more” -> “**Bluetooth**” and enable “**Pair remote control**”
4. Press and hold the **Mute** and **Standby/Power** buttons on the remote control.
5. Check that remote control is now listed in a Bluetooth “**Connections**” menu.

Favourite buttons programming

- Start the EC Play App .
- Add radio stations and /or library playlists to your favourites.
- Go to “... more” -> “**Preferences**” -> “**Remote control**”.
- Assign a Radio station or Library playlist to the specific favourite button.

Products compatibility list:

TANA SL1 Wireless speaker, TANA SL2 Wireless speaker, RENA SA1 Wireless streamer/amplifier, RENA S1 Wireless streamer, RENA SA2 Wireless streamer/amplifier, RENA S2 Wireless streamer



ELECTROCOMPANIET

If music *really* matters™

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

REV 1 2023

www.electrocompaniet.com